



DOOR HANDING GUIDE

The hand of a commercial door is determined from outside of the room or building. Please use this guide to specify the hand or swing of a door, door replacement, and door hardware needs.


SINGLE DOORS

1. Left Hand Door (LH) hinges on left, door swings in

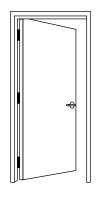


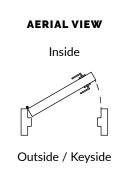


2. Left Hand Reverse (LHR) hinges on left, door swings out

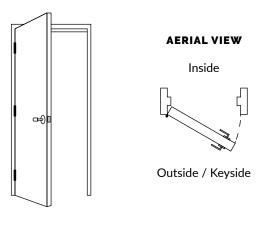


3. Right Hand Door (RH) hinges on right, door swings in

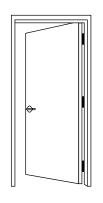

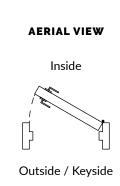


4. Right Hand Reverse (RHR) hinges on right, door swings out

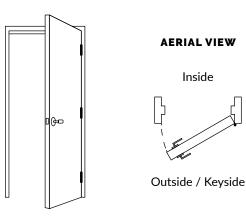


DOUBLE DOORS

1. Left Hand Active (LHA) hinges on left, doors swing in



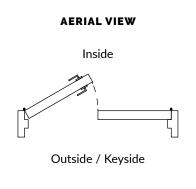


2. Left Hand Reverse Active (LHRA) hinges on left, doors swing out

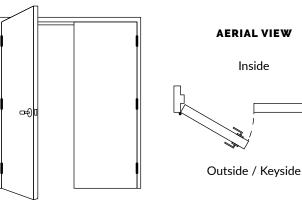


DOUBLE DOORS (continued)

3. Right Hand Active (RHA) hinges on right, doors swing in

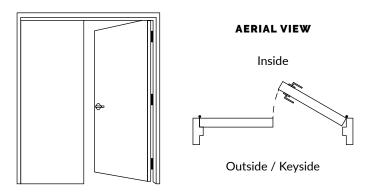


4. Right Hand Reverse Active (RHRA) hinges on right, doors swing out

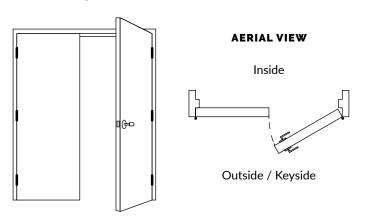


Top and bottom flush bolts are installed inside of inactive doors to secure them when not in use.

DOUBLE DOORS — BOTH ACTIVE


1. Push-Pull

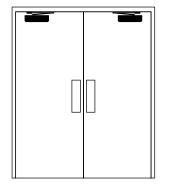




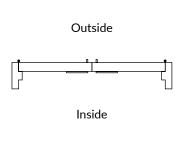


2. Vertical Rod Exit Devices

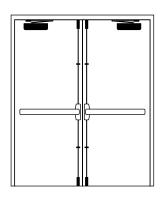


AERIAL VIEW

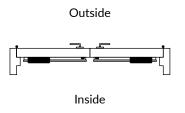

3. Rim Exit Devices with Mullion

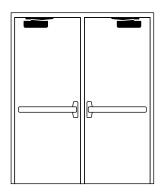

AERIAL VIEW

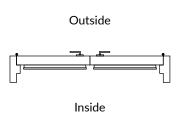

Have a question about proper door handing? We're here to help!

